

Tools Required:

5mm hex key
Drill
Phillips head screwdriver

Protection Class: IP 65

Weight: 140.7 lbs



Dimensions

A: 8-5/8"

B: 34-3/8"



Notice to Installer for 84 016:

1. See page 2 for specific product safety warnings.
2. Fixture may be damaged if connected to conduit systems that contain water.
 - Article 300-5G of the National Electric Code requires that "Conduits or raceway through which moisture may contact energized live parts shall be sealed or plugged at either or both ends."
3. For proper installation, an accompanying bollard head must be selected with the bollard tube.
4. Wet location listing does not imply suitability for exposure to standing water for long periods of time.
5. The bollard tube and anchorage unit are designed in conjunction with a foundation that must be constructed on site (see note below).

84 016 Concrete Foundation:

NOTE: See the concrete pouring instructions 01516 (included). The size of the foundation depends on the topography and the soil properties and must be decided on site. CONSULT STRUCTURAL ENGINEER FOR FOUNDATION DETAILS. CONSTRUCTION DRAWINGS FOR REFERENCE ONLY. PLANS ARE ONLY VALID WHEN USED IN CONJUNCTION WITH STRUCTURAL PLANS, AS DETERMINED BY A QUALIFIED PROFESSIONAL.

1. Create the sub-base.
2. Create rebar reinforcement cage in accordance with the concrete pouring instructions 01516 (included).
3. Cast the foundation slab.
4. Install the conduit and guide it through the conduit entry in the anchorage unit.
5. Secure the anchorage unit by fastening it to the foundation slab. Place the manhole around the anchorage base and exposed reinforcement cage. Center the manhole and make sure the anchorage unit tube is absolutely vertical.
6. Fill the manhole and anchorage unit with concrete up to, but not over, the bollard tube attachment points.

WARNING: DO NOT OVER FILL.

84 016 Bollard Tube Installation:

NOTE: The bollard tube cannot be below the finished grade.

1. Remove mounting bolts and washers from the anchorage unit.
2. Place bollard housing over anchorage unit and tighten bolts firmly.
3. Spacer washers included for dimensional deviations (+/- 0.5") of the paved surface area.
4. Lead the supply cable into the provided connection box and make wiring connections.
5. Make supply wiring connections inside the wiring box (provided) using 2 pole connectors:
 - MAIN VOLTAGE SUPPLY WIRE TO BLACK CABLE WIRE IN JBOX
 - NEUTRAL (COMMON) SUPPLY WIRE TO WHITE CABLE WIRE IN JBOX
 - GREEN GROUND WIRE TO GREEN CABLE WIRE IN JBOX
 Dimming (if applicable):
 - DIMMING CONTROL WIRE (+) TO POSITIVE CABLE WIRE IN JBOX
 - DIMMING CONTROL WIRE (-) TO NEGATIVE CABLE WIRE IN JBOX
6. Install the bollard head per specific bollard head installation instructions.

Figure 1:


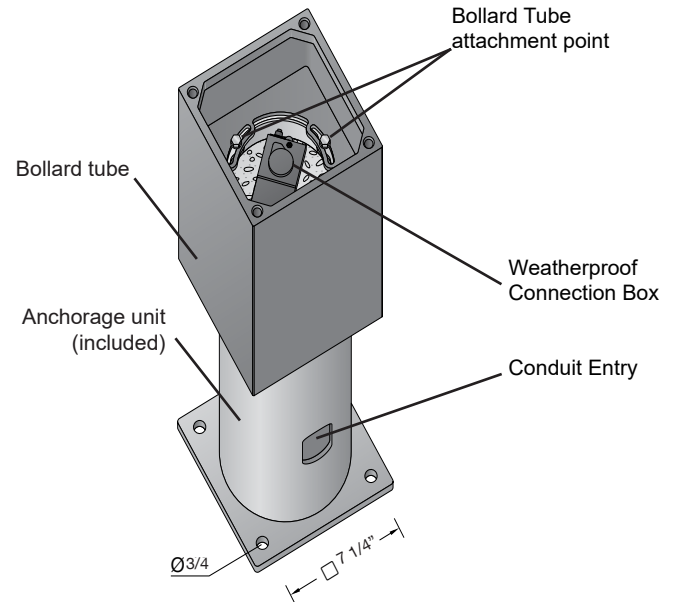


Figure 2:

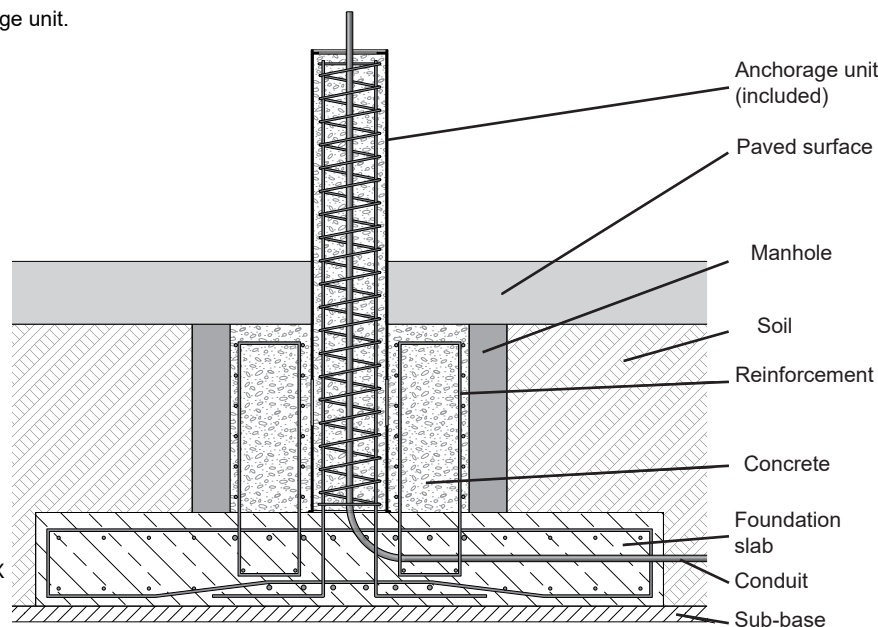

In the interest of product improvement, BEGA reserves the right to make technical changes without notice.

Product Safety Warnings:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SUITABLE FOR WET LOCATIONS.

MIN 90°C SUPPLY CONDUCTORS.

CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS. CONVIENT AUX EMPLACEMENTS MOUILLÉS.

LES FILS D'ALIMENTATION 90°C MIN.
